## **S9X Plus Instruction Manual**



VOICE REMINDER

EQ.	Selection	Music	quickly  press twice quickly	/	Pure voice  DJ
MUSIC	music sharing Sound	Monte	press twice		Post control
		piuy	Short press at the same time		
	next	play	press&hold 2s	flash in blue	
	previous	play	press&hold 2s	flash in blue	
	volume +	stand by	briefly press	flash in blue	
PHONE CALL	play/pause	stand by	briefly press	flash in blue flash in blue	
	voice command	stand by	press&hold 2s	flash in blue	
	redial	stand by	press twice quickly	flash in blue	
	hang up	during phone call	briefly press	flash in blue	
	reject	incoming call	press&hold 2s	flash in blue	
	answer the call	incoming call	briefly press	flash in blue	
PHONE CONNECTION	Bluetooth	power on	press&hold 5s	flash in blue	connected
POWER	battery detect	stand by	press at the same time		remind the battery status
	Manual/ automatic pick up	stand by	Press at the same time	flash in blue	Turn on/off automatic pick up
POWER ON/OFF	Automatic power off after 5minutes without connection	I	1	/	power off
	power off	power on	press&hold 3s	flash in red 1s	power off
	power on	power off	press&hold 3s	flash in blue	power on+battery remind
FONCTION	DESCRIPTION	314103	BOTTON/INIETHOD		VOICE REIVINVOER

FUNCTION	DESCRIPTION	STATUS	BUTTON/METHOD	LED	VOICE REMINDER
INTERCOM CONNECTION	pairing mode	power on	press&hold 5s	flash between red & blue	paring
	searching mode	power on	<b>briefly press</b>	flash between red&blue	searching
	memory clear	connected	+ press&hold 6s after power off	flash in red	beep
INTERCOM	intercom on	connected	briefly press	keep in blue	intercom on
	intercom off	connected	briefly press	flash in blue	beep
	re-connect	power on	briefly press		beep
FM RADIO	FM on	stand by	ressatthe same time	flash in blue	FM on
	FM off	FM on	press at the same time	flash in blue	FM off
	previous	FM on	press&hold 2s	flash in blue	previous
	next	FM on	press&hold 2s	flash in blue	next

## Contents



## **S9X Plus Instructions**













